



Notes:

1. All dimensions are in millimetres unless otherwise noted.
2. The Zero Point is the intersection of the Datum Water Line (dwl) with the forefoot.
3. Positions are measured fwd and aft (marked "-") of the Zero Point.
4. Heights are measured above and below (marked "-") the dwl.
5. Offsets are measured each side of the fore-&-aft centreline (marked "c").
6. Sections are designated "s" followed by their position.
7. Waterlines are designated "wl" followed by their height.
8. Buttocks are designated "b" followed by their offset.
9. Diagonals are designated "d" followed by their start height on the centreline and their angle to it.
10. Offsets on diagonals are measured down the angle of the diagonal.

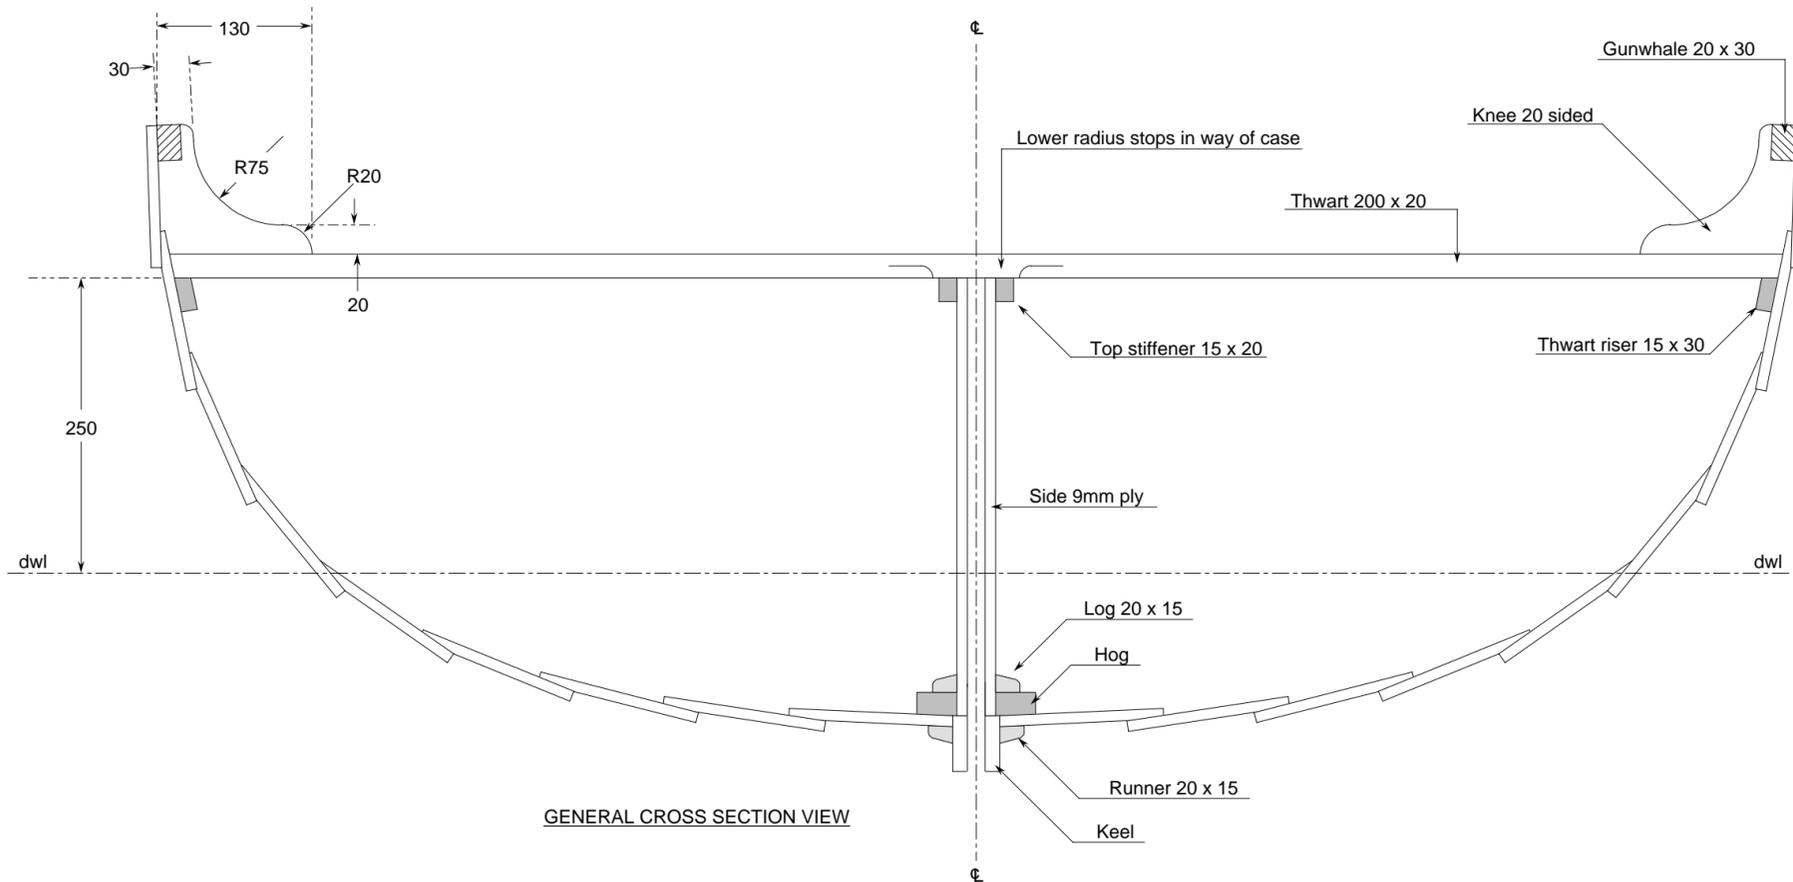

GENERAL CROSS SECTION VIEW

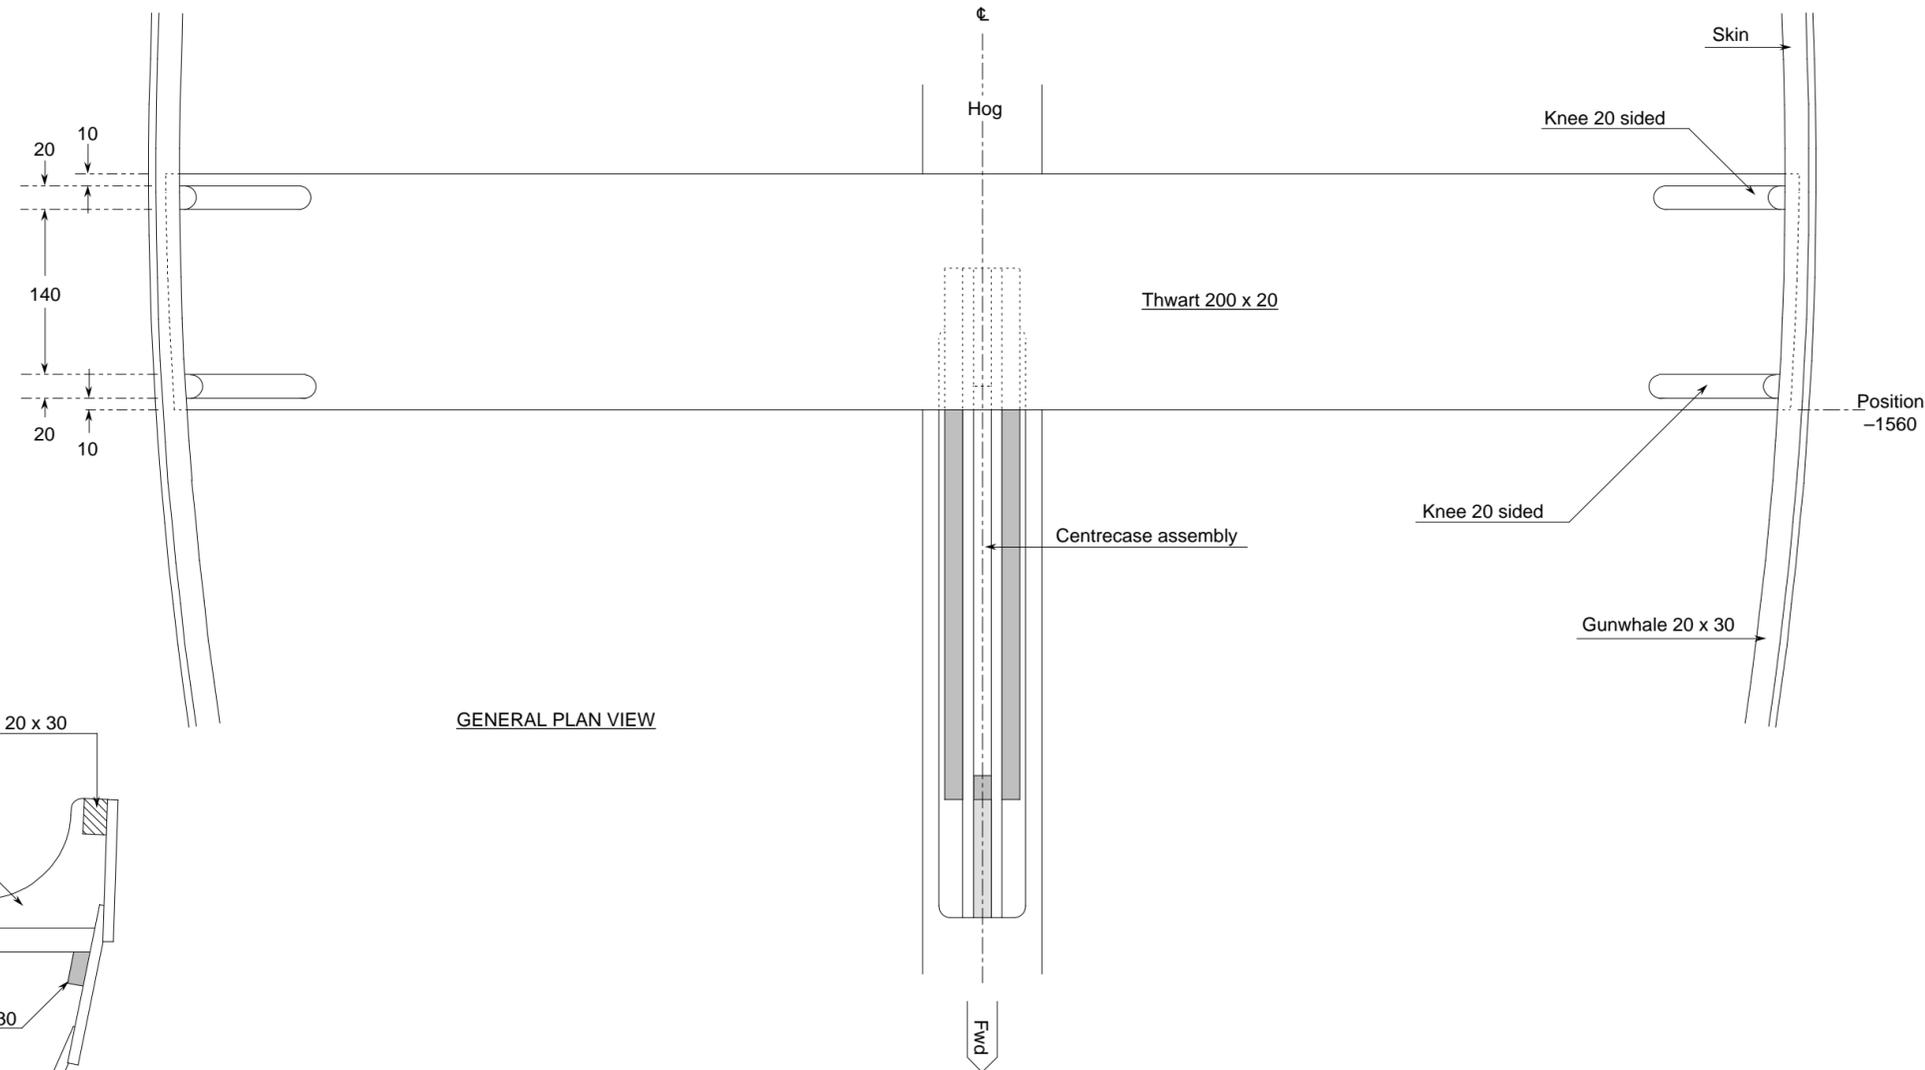

GENERAL PLAN VIEW

	Offsets of Thwart					
	Aft Edge of Thwart			Fwd Edge of Thwart		
	Position	Offset	Height	Position	Offset	Height
Top	-1760	686	270	-1560	678	270
Underside	-1760	683	250	-1560	675	250

Whisstock support@whisstock.com
boats and boat plans

Boat 055
Mid Thwart Assembly & Centrecase 2

Scale 1/5
Date 20/05/2000
Plan No. 055/004/05
Issue No. 01 web