


Notes:

1. The Zero Point is the intersection of the dwl with the stem at the forefoot.
2. The (fore-&-aft) centreline is marked c/line.
3. Offsets are measured about centreline.
4. Heights are measured above or below (marked "-") the dwl.
5. Positions are measured forward and aft (marked "-") of the Zero Point.
6. Offsets on diagonals are measured along the diagonal.
7. Waterlines are marked "w" followed by their height.
8. Buttock lines are marked "b" followed by their offset.
9. Diagonals are marked "d" followed by their height on the centreline and then their angle to it.
10. All offsets are to inside ofskin unless otherwise noted.

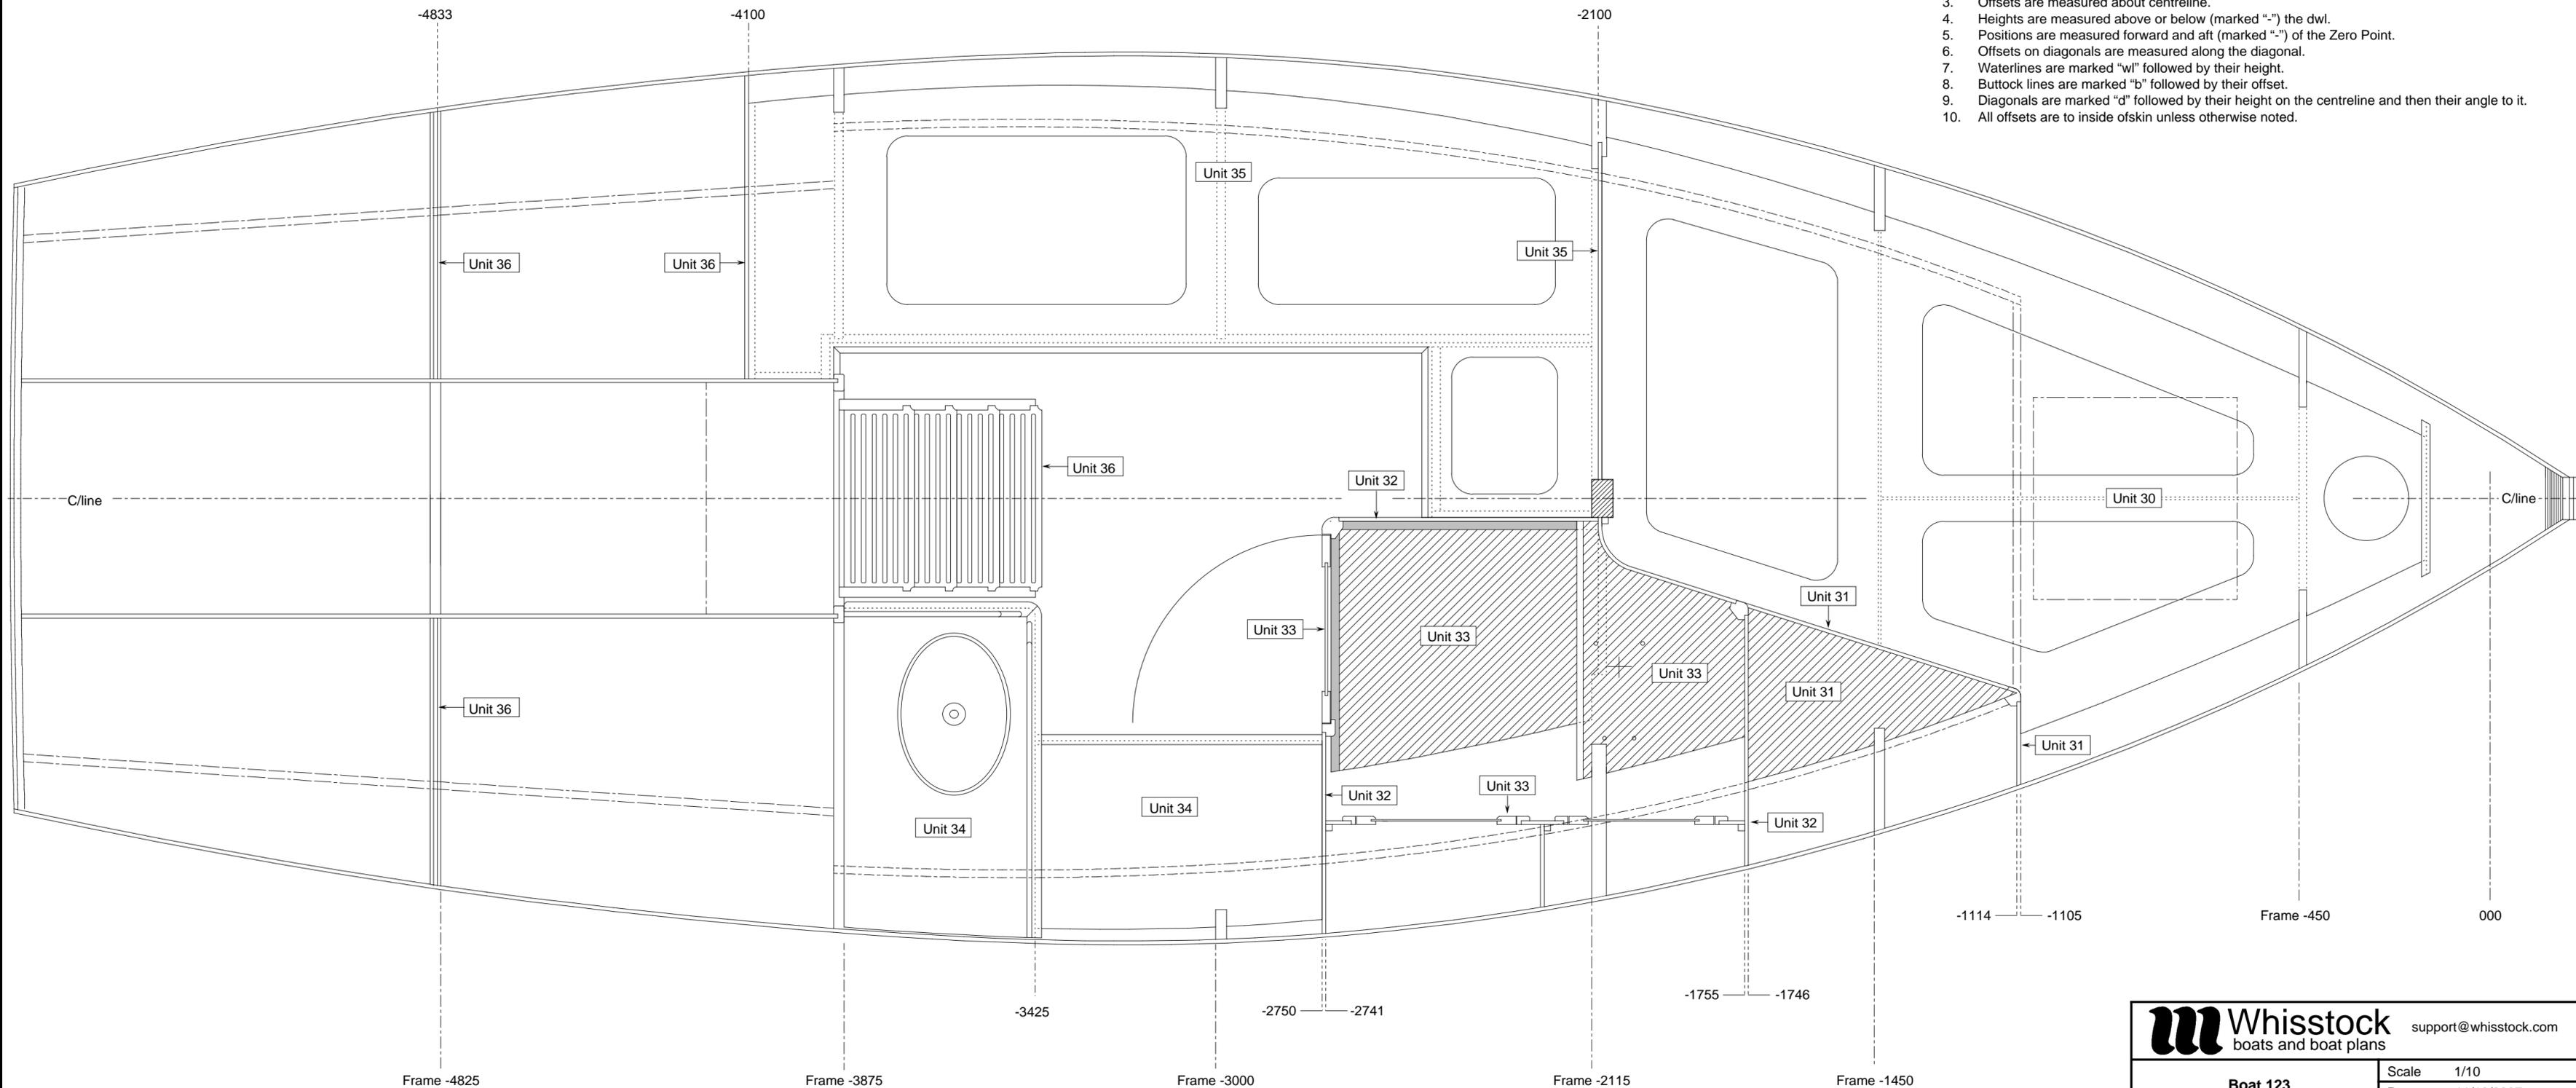

Boat 123 Interior Furniture 3-Berth Layout	Scale 1/10
	Date 11/10/2007
	Plan No. 123/010/37
	Issue No. 01 web
All dimensions in millimetres unless noted otherwise	