


Note: Transom detail not shown

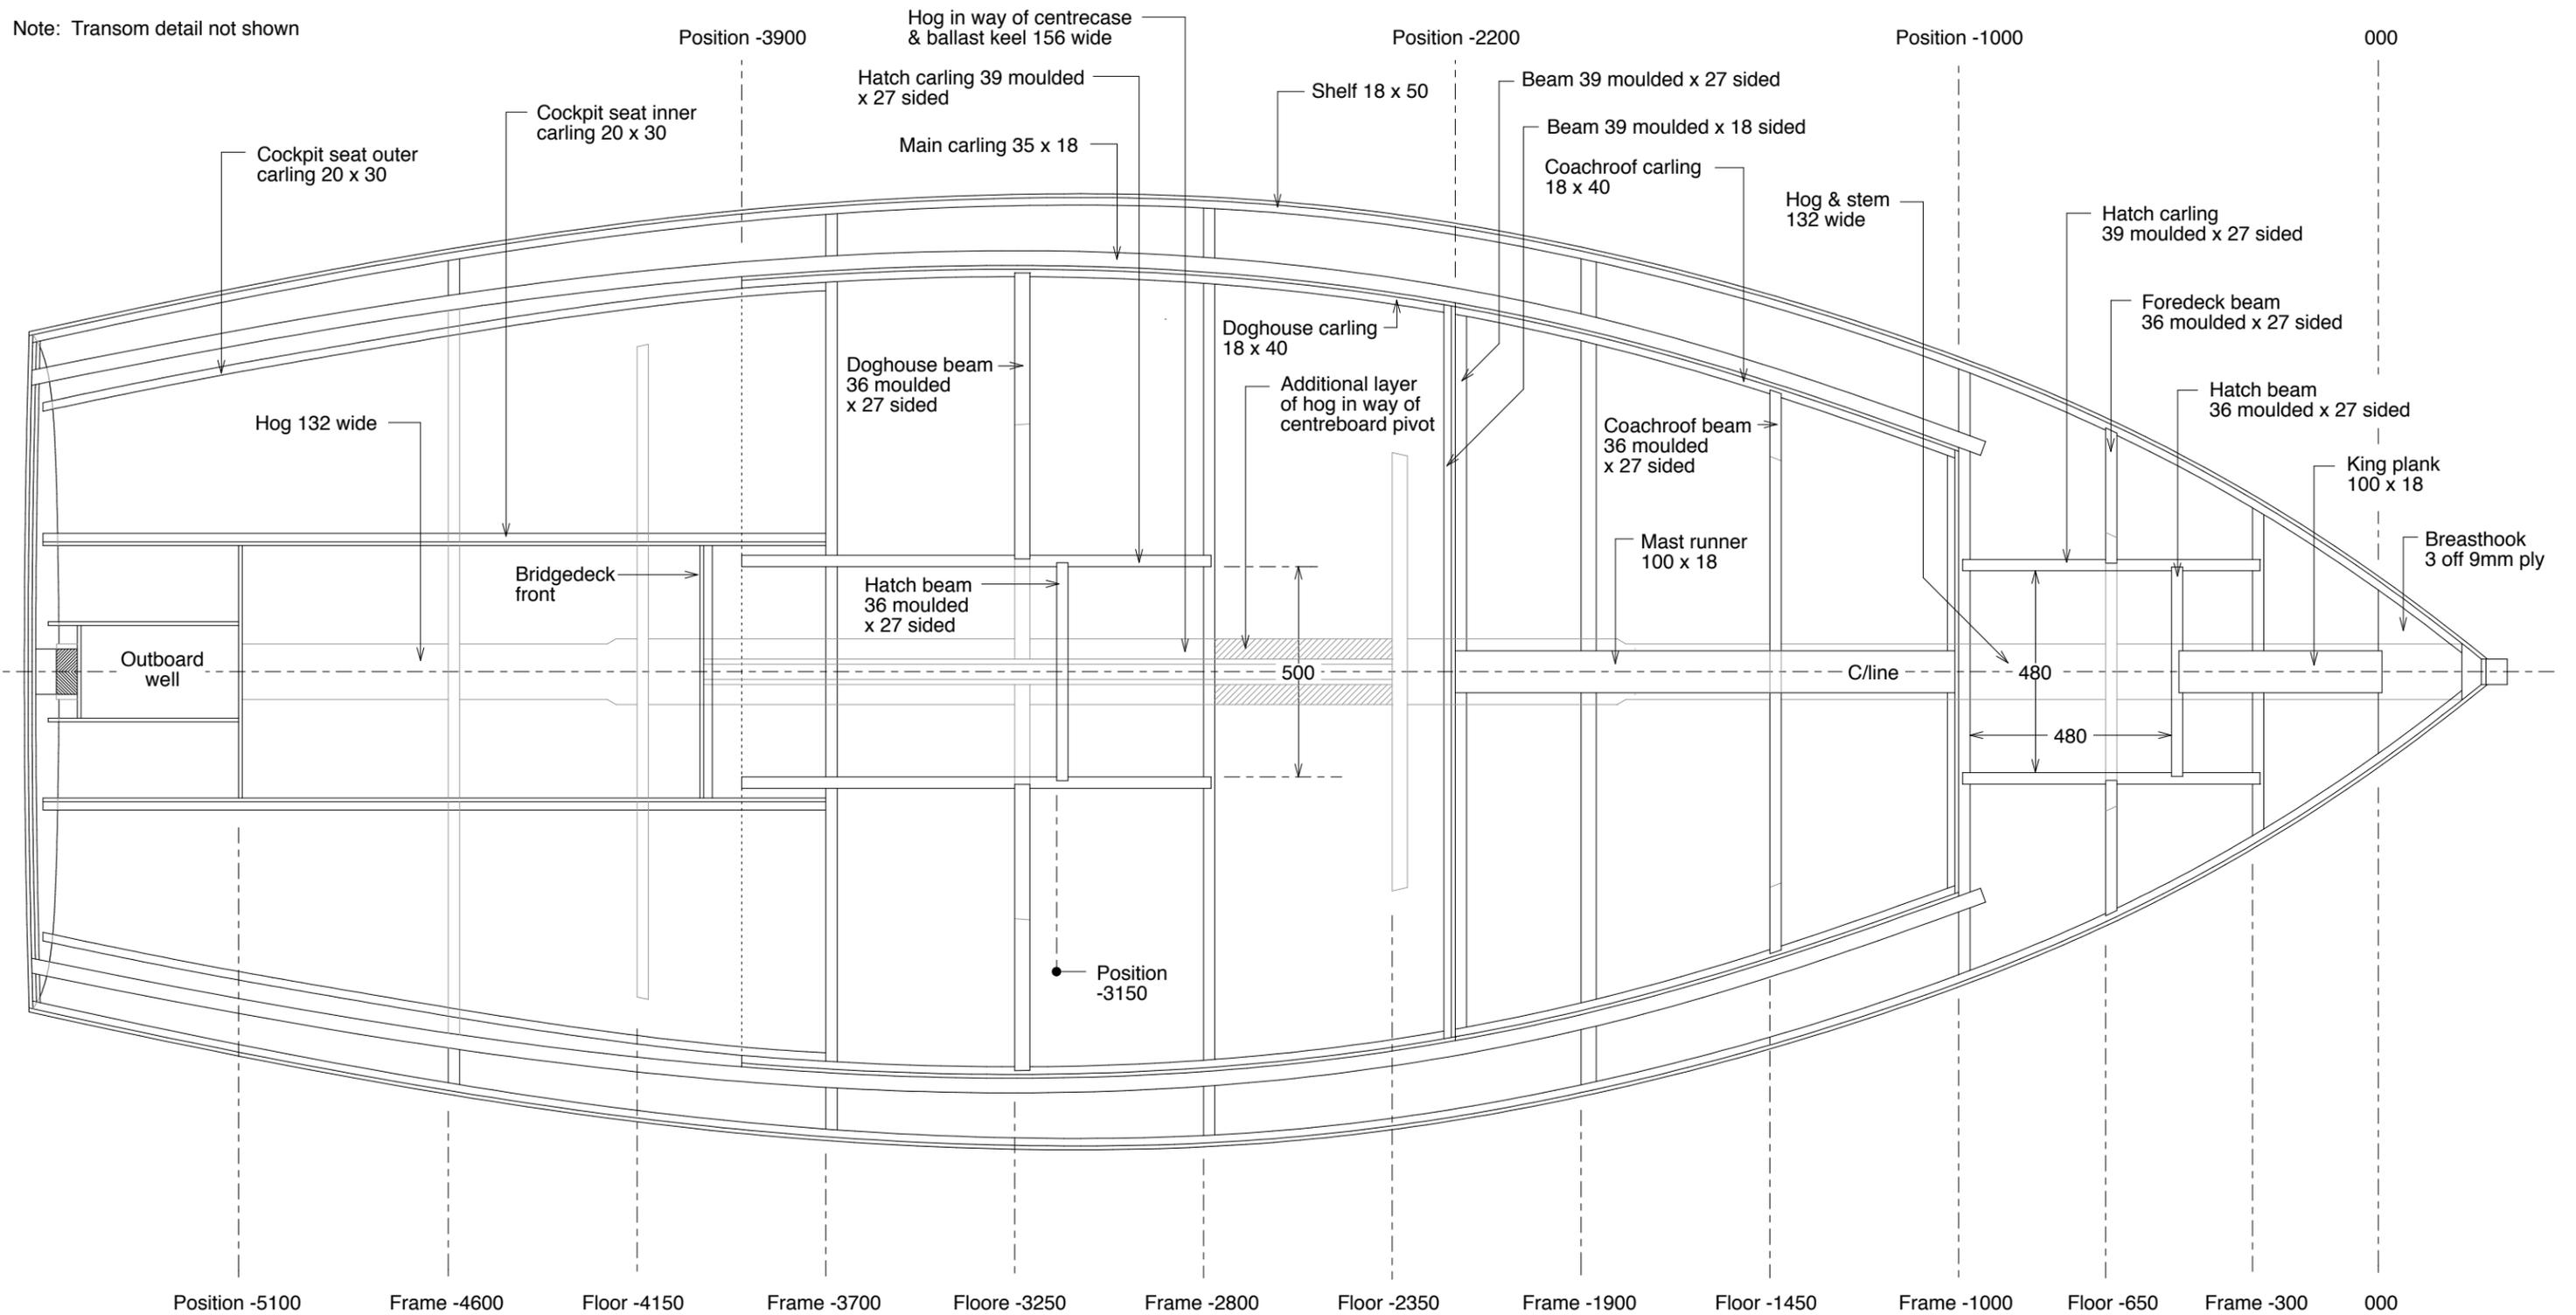

General Notes:

1. The Zero Point is the intersection of the datum waterline (dwl) with the forefoot.
2. The (fore-&-aft) centreline is marked c/line.
3. Offsets are measured about centreline.
4. Heights are measured above or below (marked "-") the dwl.
5. Positions are measured forward and aft (marked "-") of the Zero Point.
6. Offsets on diagonals are measured along the diagonal.
7. Waterlines are marked "w" followed by their height.
8. Buttock lines are marked "b" followed by their offset.
9. Diagonals are marked "d" followed by their height on the centreline and then their angle to it.
10. All offsets are to inside of skin unless otherwise noted.

Date	Change History
19 Apr 2014	Original
09 May 2014	Increased hog width
30 May 2014	Extra hog layer in way of centreboard pivot

**Whisstock**  
boats and boat plans

support@whisstock.com

<b>Design 165</b>	Scale 1/15
<b>Doghouse Version Laminated Frames Longitudinal Structures Plan View</b>	Date May 30 2014
© Debenriver Ltd 2014 All Rights Reserved	Plan No. 165/003/002
	Issue No. 03
	All dimensions in millimetres unless otherwise noted