


Shape and Bevel of Outside Edge of Seat Top						
	Underside of Top			Upper Face of Top		
	Position	Offset	Height	Position	Offset	Height
Fwd end	-3700	935	716	-3700	935	725
	-3900	921	straight	-3900	921	straight
	-4100	900		-4100	900	
	-4300	873		-4300	874	
	-4500	843		-4500	844	
	-4700	811		-4700	812	
	-4900	777		-4900	779	
-5100	741	-5100		743		
Transom	-5300	703	-5300	705		
	-5500	662	-5500	664		
	-5584	645	-5585	647		

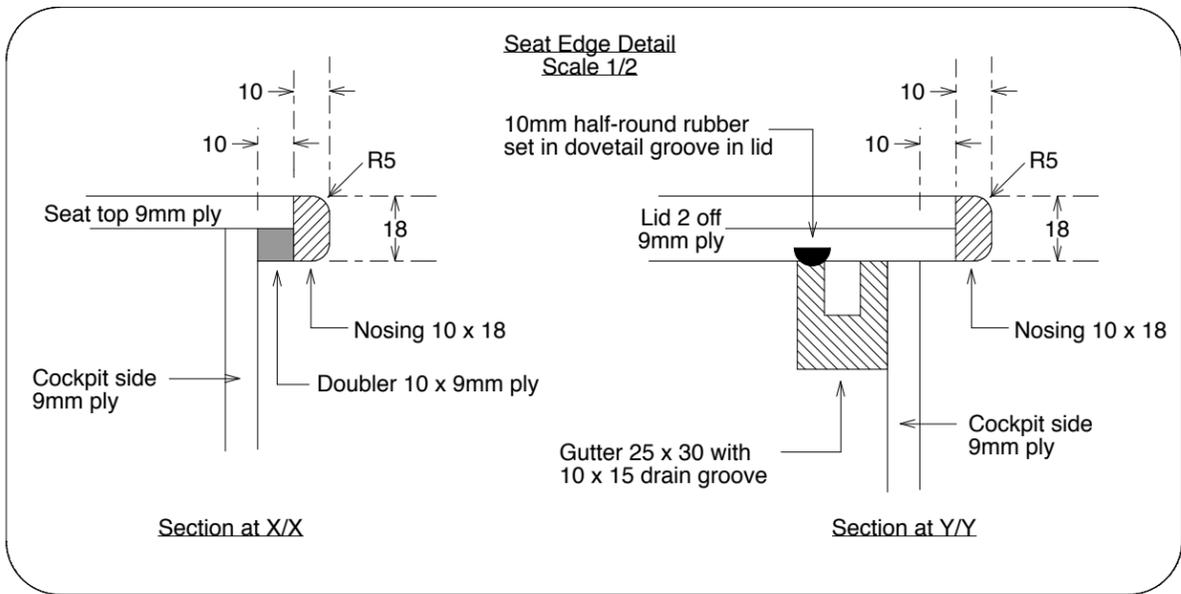

- General Notes:
1. The Zero Point is the intersection of the datum waterline (dwl) with the forefoot.
  2. The (fore-&-aft) centreline is marked c/line.
  3. Offsets are measured about centreline.
  4. Heights are measured above or below (marked "-") the dwl.
  5. Positions are measured forward and aft (marked "-") of the Zero Point.
  6. Offsets on diagonals are measured along the diagonal.
  7. Waterlines are marked "wl" followed by their height.
  8. Buttock lines are marked "b" followed by their offset.
  9. Diagonals are marked "d" followed by their height on the centreline and then their angle to it.
  10. All offsets are to inside of skin unless otherwise noted.

**Whisstock** support@whisstock.com  
boats and boat plans

**Design 165**  
**Port Seat Top and Lid**

Scale 1/10 & 1/2  
Date Jul 16 2014  
Plan No. 165/009/008  
Issue No. 01

© Debenriver Ltd 2014. All Rights Reserved. All dimensions in millimetres unless otherwise noted.