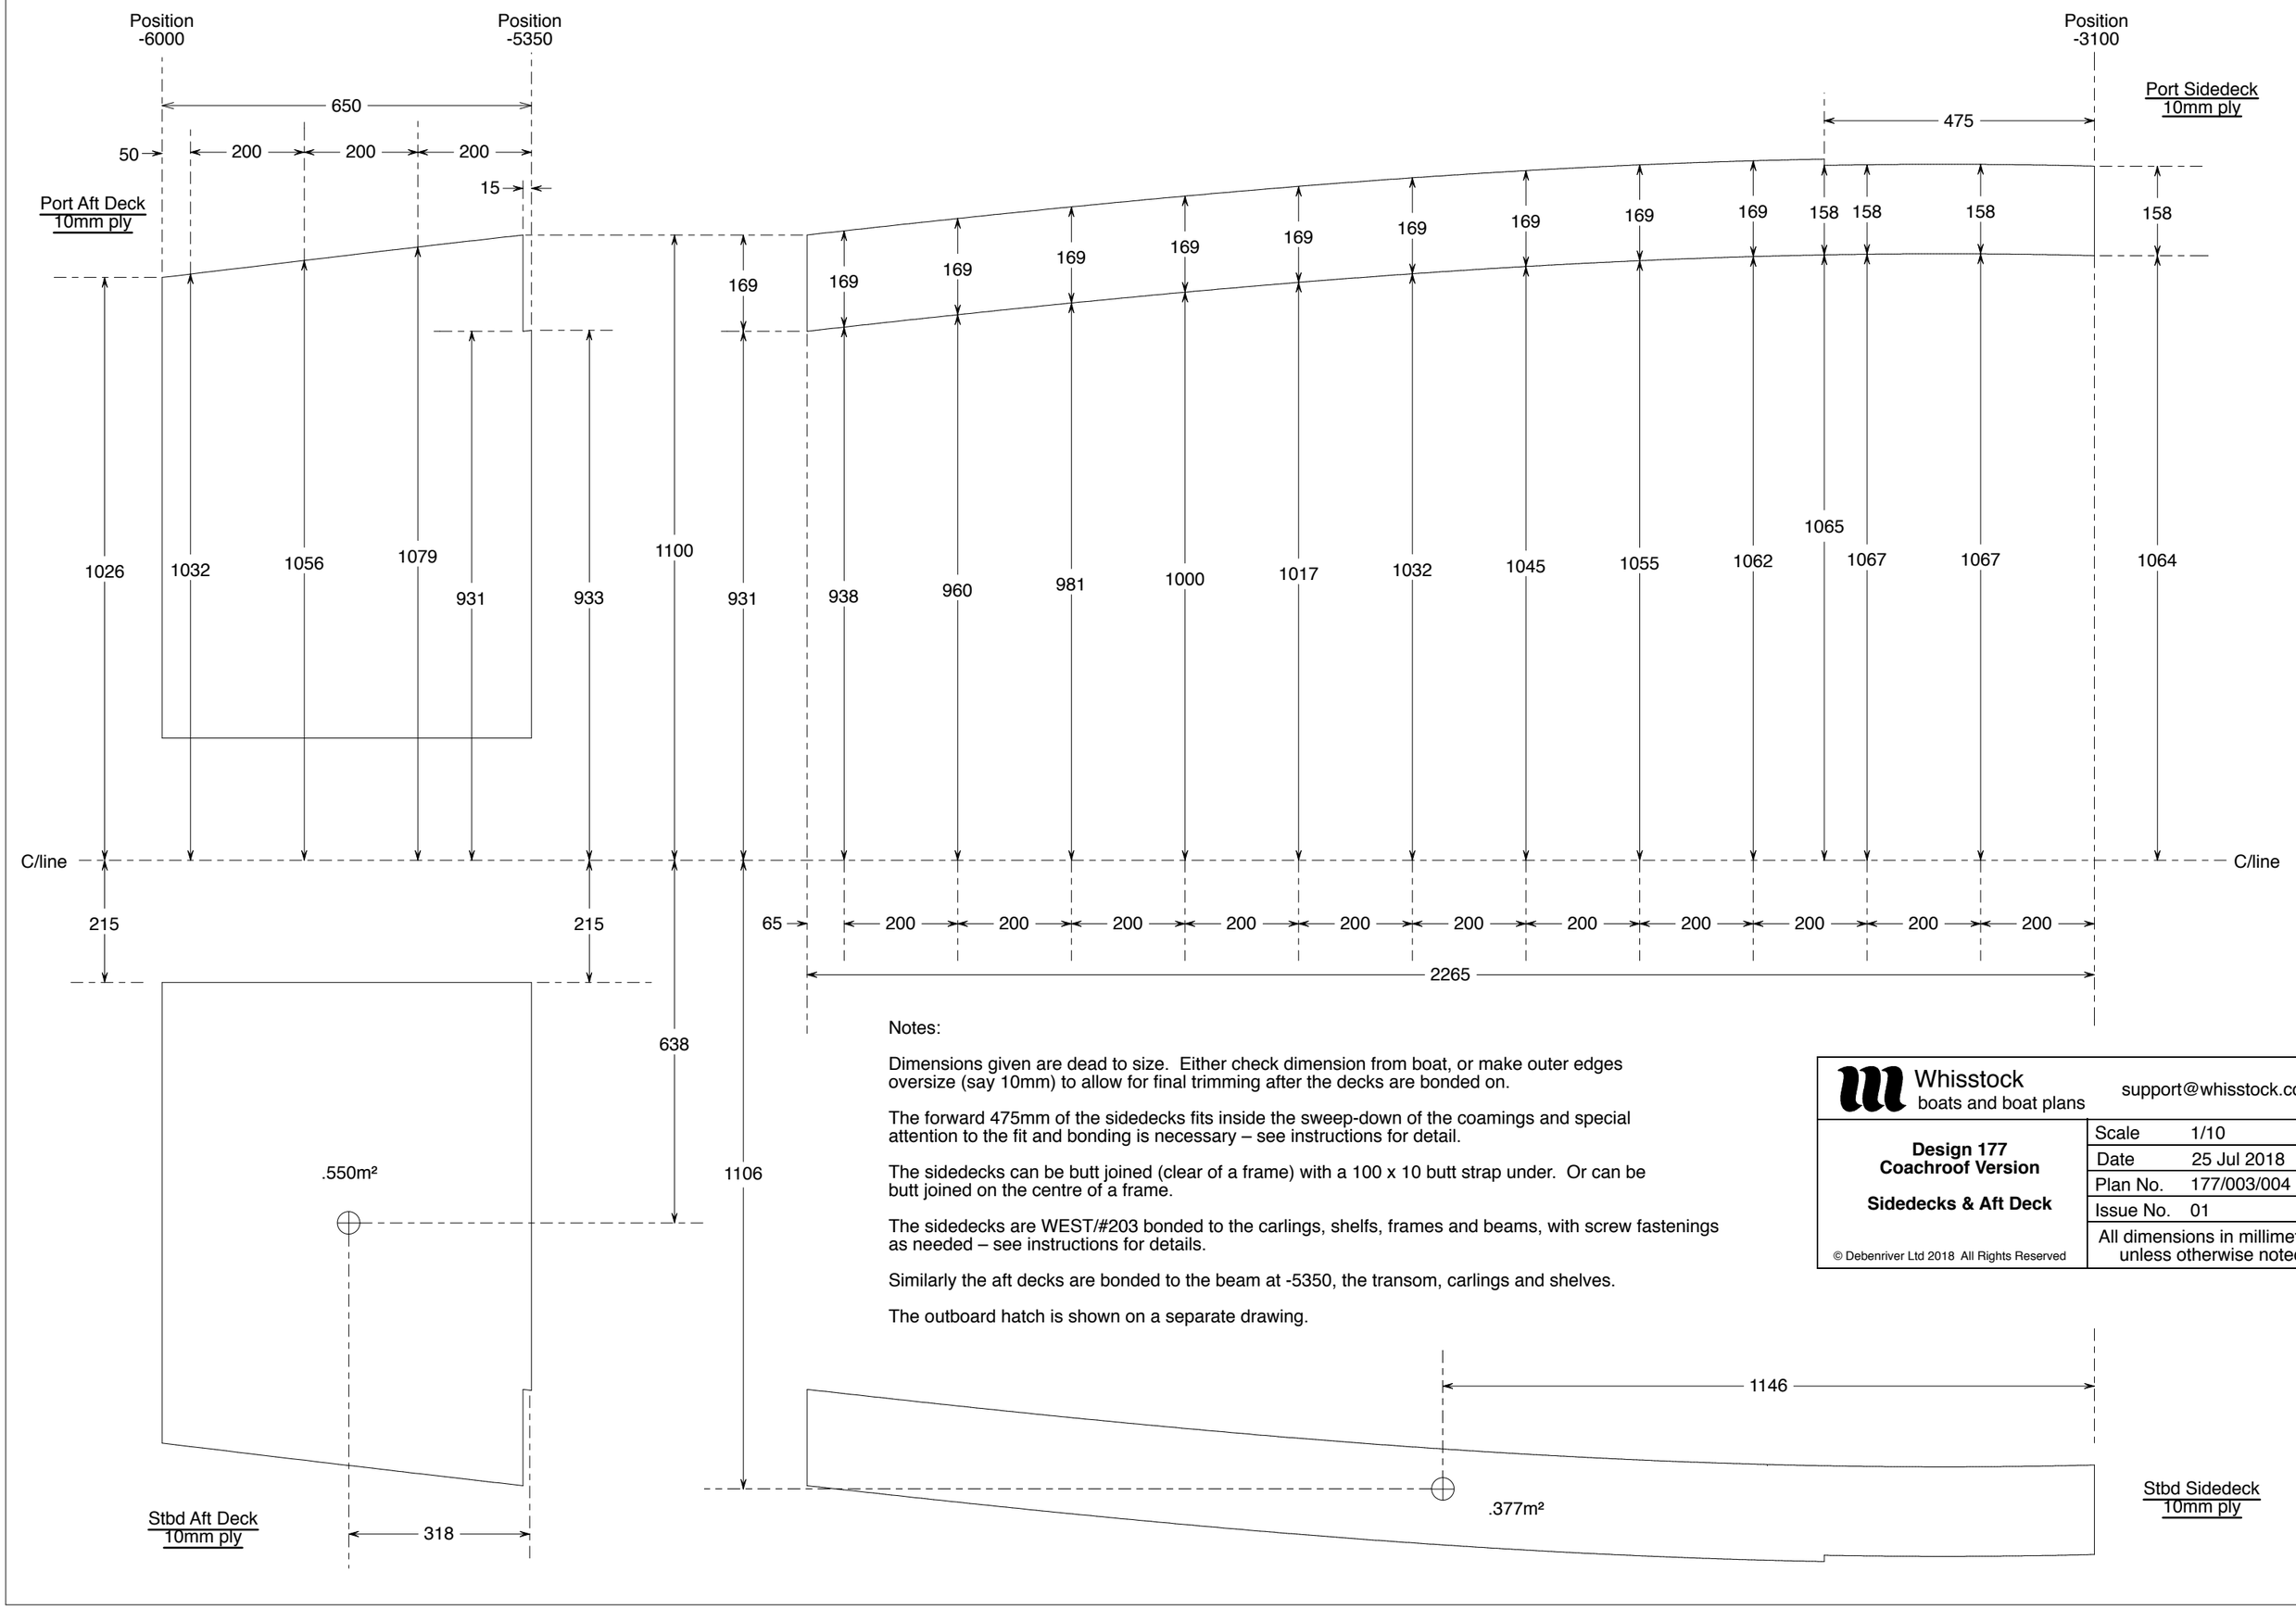

Notes:

Dimensions given are dead to size. Either check dimension from boat, or make outer edges oversize (say 10mm) to allow for final trimming after the decks are bonded on.

The forward 475mm of the sidedecks fits inside the sweep-down of the coamings and special attention to the fit and bonding is necessary – see instructions for detail.

The sidedecks can be butt joined (clear of a frame) with a 100 x 10 butt strap under. Or can be butt joined on the centre of a frame.

The sidedecks are WEST/#203 bonded to the carlings, shelfs, frames and beams, with screw fastenings as needed – see instructions for details.

Similarly the aft decks are bonded to the beam at -5350, the transom, carlings and shelves.

The outboard hatch is shown on a separate drawing.

Whisstock
boats and boat plans

support@whisstock.com

Design 177
Coachroof Version

Sidedecks & Aft Deck

Scale	1/10
Date	25 Jul 2018
Plan No.	177/003/004
Issue No.	01

All dimensions in millimetres unless otherwise noted

© Debenriver Ltd 2018 All Rights Reserved